


L125

Linear LED

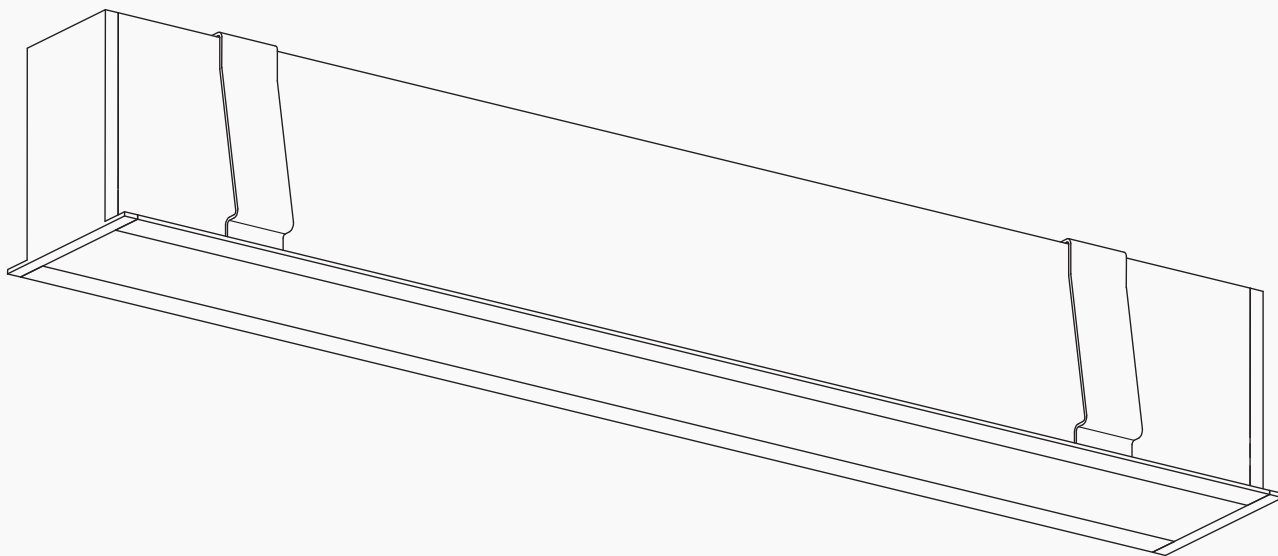





L125

Ceiling Mount with 5/8" or 1/2" drywall

Parts

Fixture housing
Spring Brackets
Safety Anchors

- 1) Screw Safety Anchors to the Spring Brackets. Secure support wires to the anchor. Adjust length of wire accordingly to ensure proper height of the fixture housing. (If anchor is first placed on the left of the bracket, then mount the next one on the right) (Anchors should be placed in an alternate pattern along the rail)
- 2) Push the fixture through the opening in the drywall. Recommended cut out size 80mm wide (3-1/8"). Spring brackets will snap out.
- 3) Tighten the center screw until the fixture housing is secure.

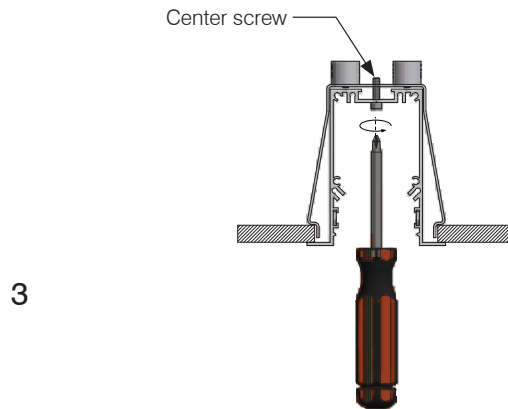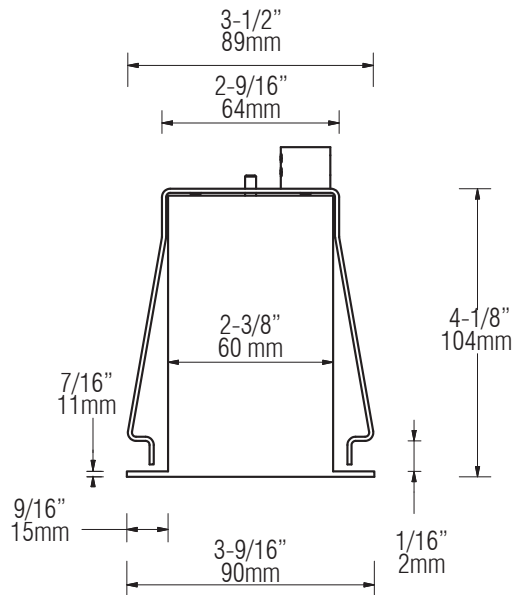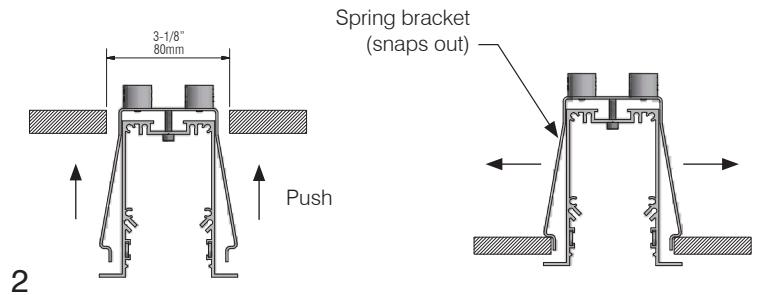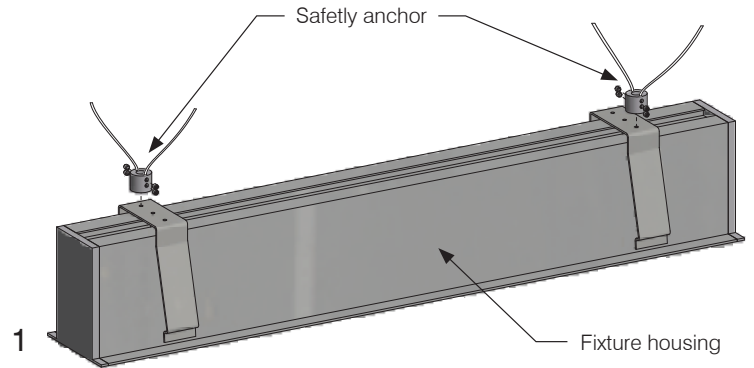

L125

Fixture Assembly Diagram

Parts


Fixture housing
2 x End Caps
Inner rail
Mounting bracket with magnets
Driver & driver housing
Dimming module (optional)

Fixture Assembly

- 1) Make power connection to wire leads by bringing in Line Voltage and making connection to driver.
- 2) (Implied step)
- 3) Replace driver housing cover plate. Ensure driver housing and driver are secured to fixture housing.
- 4) Push up inner rail until it connects with magnets on mounting brackets.

**Driver will not fit directly under the spotlight fixture. Do not install directly under.*

FACTORY WIRED
Do not adjust wire connections to driver and spotlight fixture

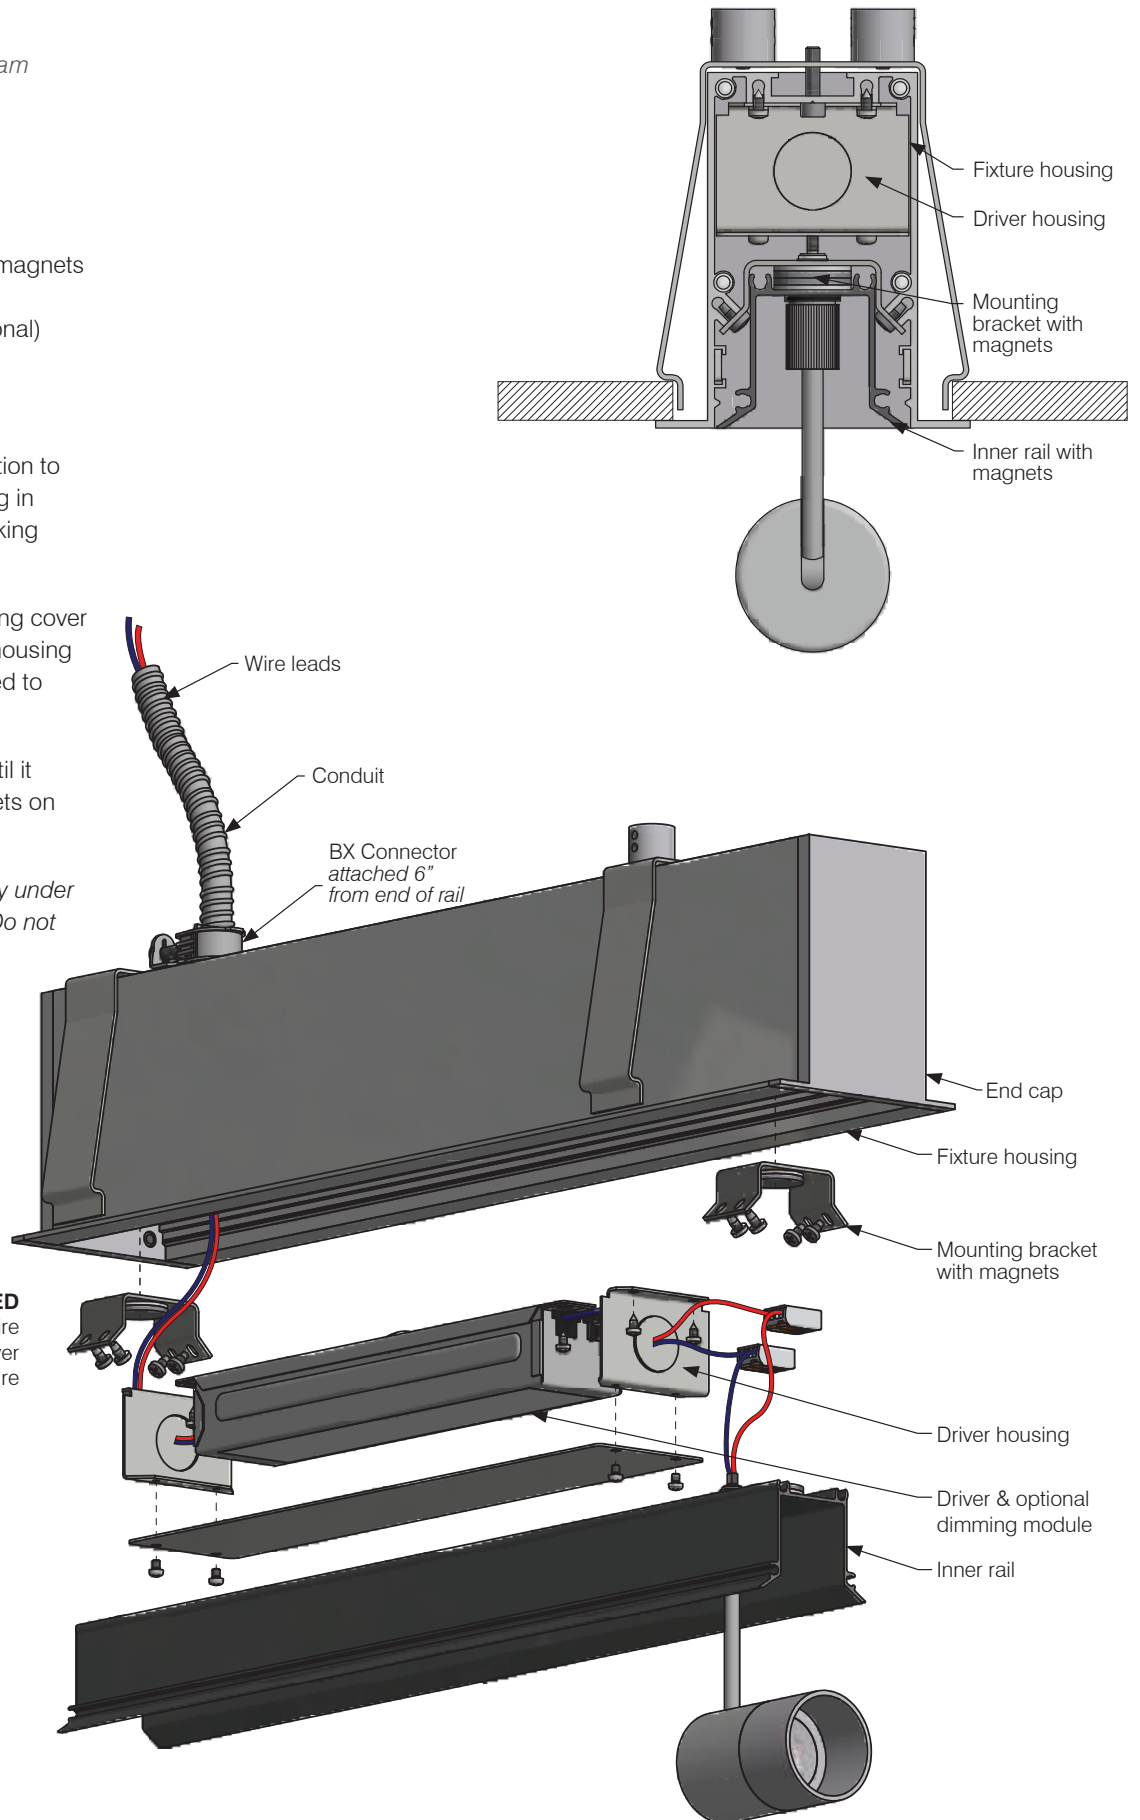

L125



Fixture Assembly with Blank Section

Parts

- Fixture housing
- 2 x End caps
- Mounting bracket with magnets
- Inner rail with magnets

Fixture Assembly

- 1) Push up inner rail until it connects with magnets on mounting brackets.

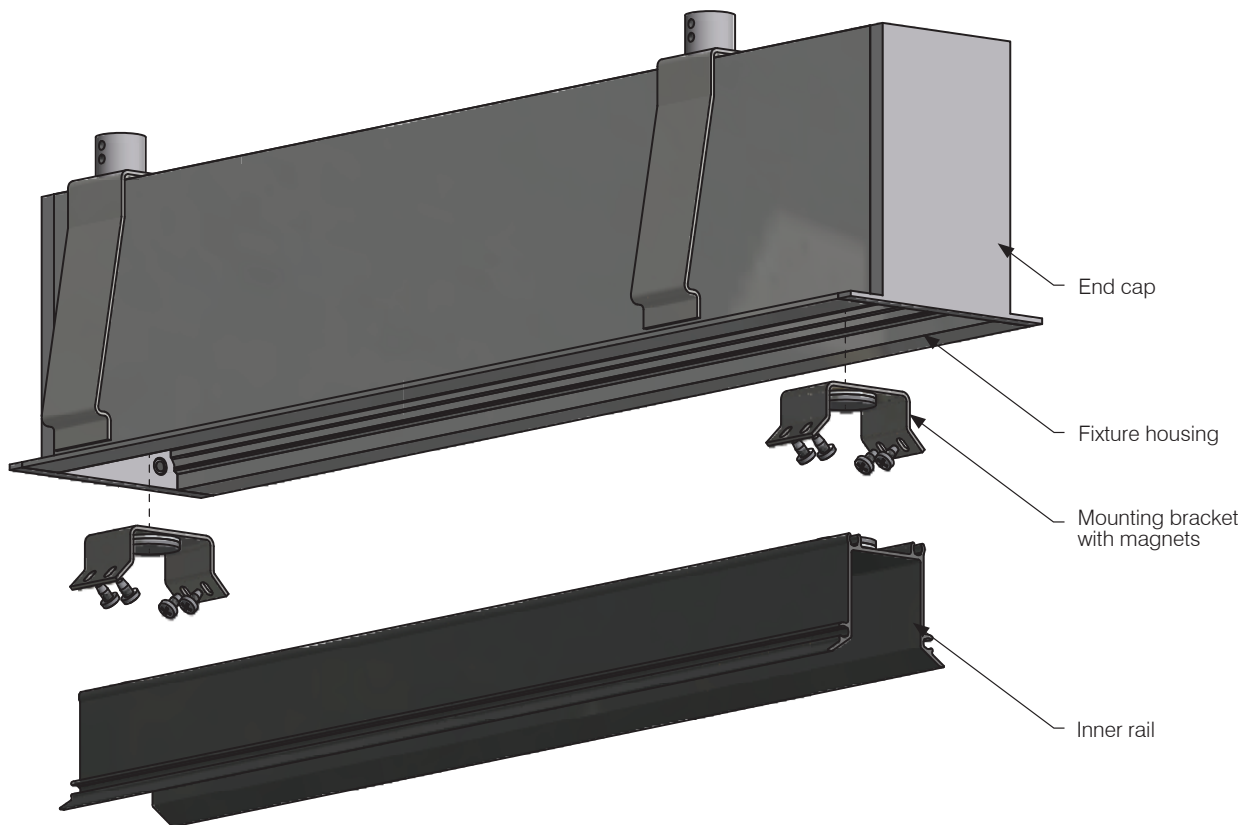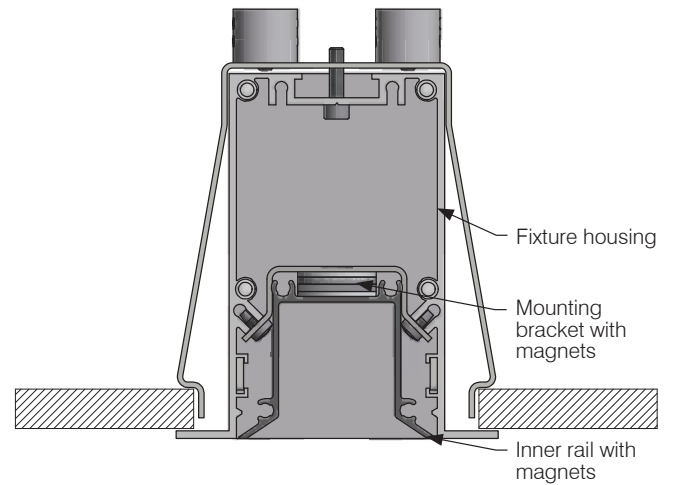



L125

Joining L125 & L124 section of continuous run

Parts

Fixture housing
Mounting bracket with magnets
Inner rail with magnets
Cover

- 1) Make power connection.
- 2) Push up inner rail until it connects with magnets on mounting brackets.
- 3) with 2 screws secure End Cap Joiner Plate to the back of the fixture housing.
- 3) Install L124 LED Rail Light on the other half.
**See L124 Installation Instructions*
- 4) Push lens up into the fixture housing until it snaps into place and is secure.

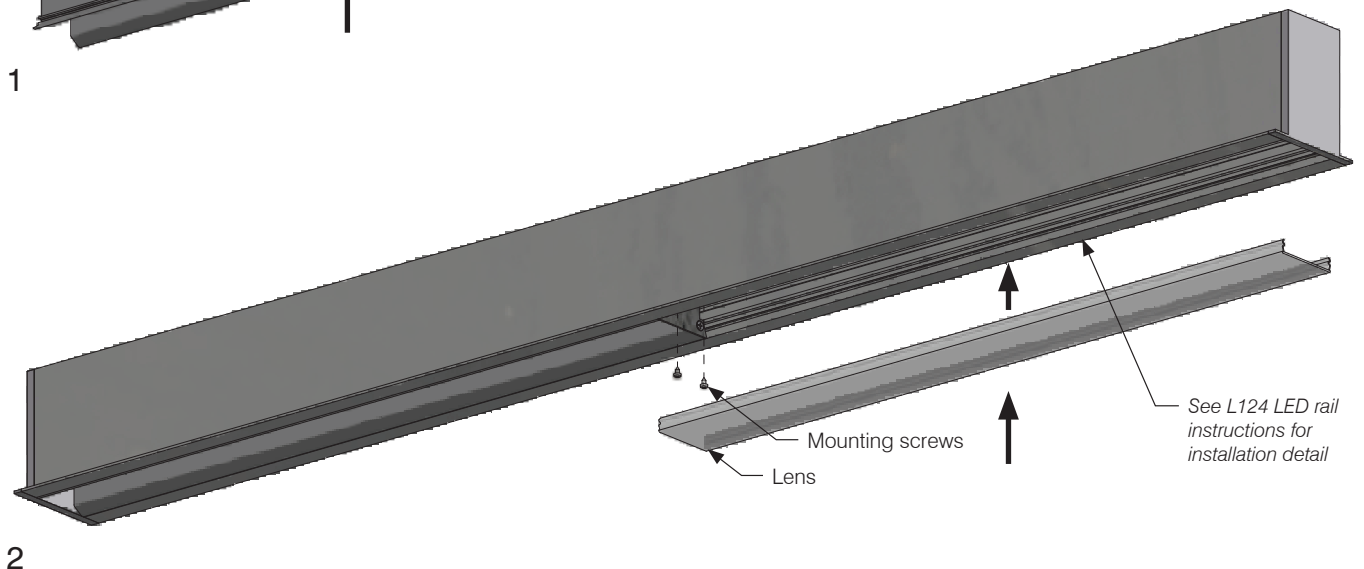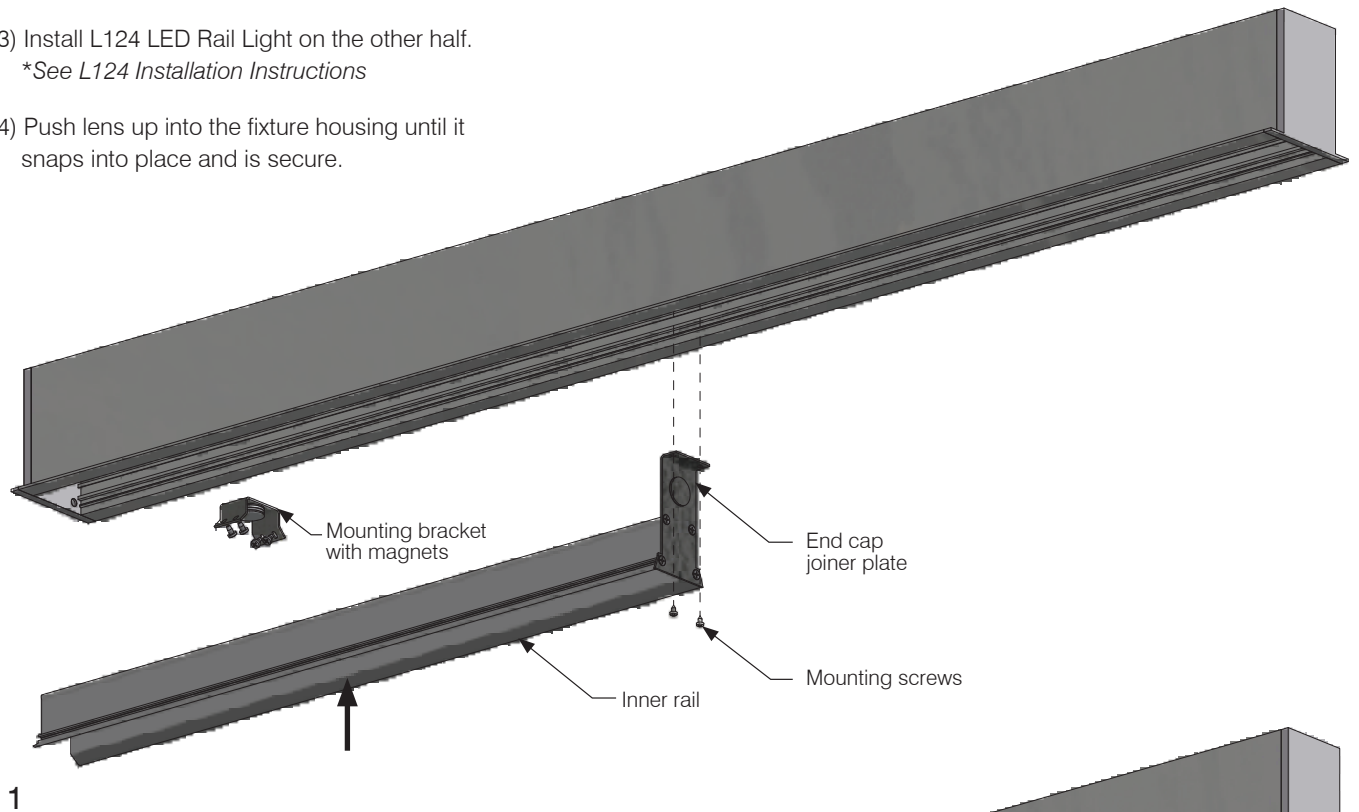



L125

Joining Fixtures Together for Continuous Runs

Parts

Fixture housing
2 x Joiner brackets

- 1) When power supply in the joining fixture housing connect the wires using wire connectors between the fixtures.
- 2) Align joiner brackets into the slot of the opposite rail. Slide the 2 fixtures together.
- 3) Secure joiner brackets to the fixtures using set screws.

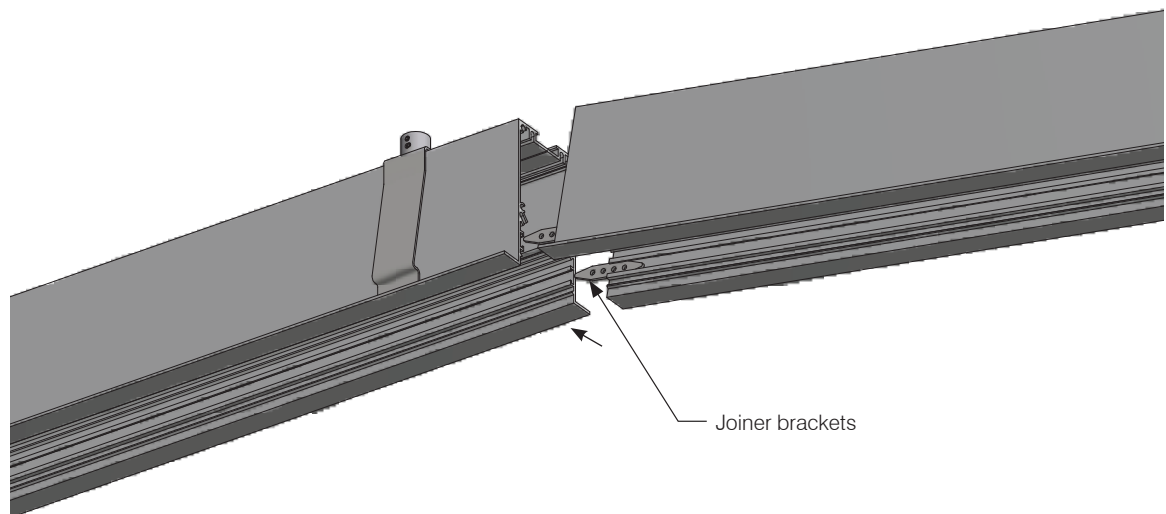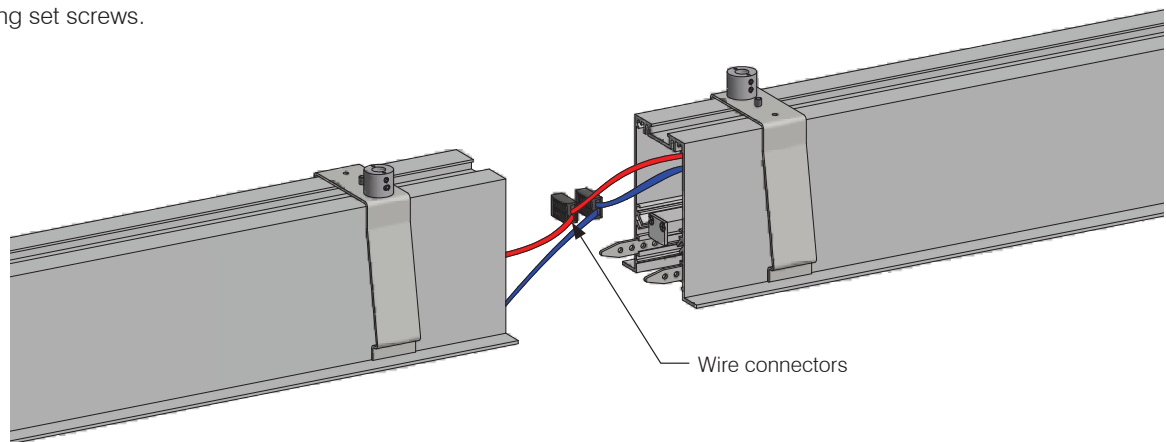

IMPORTANT SAFETY INSTRUCTIONS

KEEP THESE INSTALLATION INSTRUCTIONS

(Including General and Additional Markings for Fixtures)

(FOR MP LIGHTING LED LUMINAIRES, CLASS 3402-xx)

General and additional markings

1. For Use Only with Certified/NRTL Driver, Model _____
2. DRY LOCATIONS ONLY or OUTDOOR USE ONLY or DRY/
OUTDOOR USE ONLY or Outdoor / submersible Use Only - as
indicated on fixtures
3. MIN 90 C SUPPLY CONDUCTORS
4. Models L01, L03, L04, L05, L06, and L07: SUITABLE FOR USE IN
POURED CONCRETE, USE ON CLASS 2 CIRCUIT ONLY

Installation instructions

1. The grounding installation shall be done in accordance with
CEC-Part 1.
2. WARNING: RISK OF FIRE OR ELECTRIC SHOCK: DO NOT
MAKE OR ALTER ANY OPENINGS IN THE COMPARTMENT
OF WIRING OR ELECTRICAL COMPONENTS DURING
INSTALLATION. DO NOT ALTER OR ADD BALLASTS, OR ANY
OTHER ELECTRICAL COMPONENTS.
3. INSTALLATION AND USE OF THIS FIXTURE MOUNTING
ASSEMBLY REQUIRES A PERSON FAMILIAR WITH THE
CONSTRUCTION AND OPERATION OF LUMINAIRE
ELECTRICAL SYSTEMS AND THE HAZARD INVOLVED, IF NOT
QUALIFIED, DO NOT ATTEMPT INSTALLATION. CONTACT A
QUALIFIED ELECTRICIAN.
4. TURN OFF POWER BEFORE INSTALLATION.
5. KEEP THESE INSTALLATION INSTRUCTIONS.

CONSIGNES DE SÉCURITÉ IMPORTANTES

CONSERVER CES INSTRUCTIONS D'INSTALLATION

(Dont le général et marques supplémentaires pour les appareils)

(Pour les luminaires LED MP D'ÉCLAIRAGE , CLASS 3402 -xx)

Général et marquages supplémentaires

1. A utiliser uniquement avec Certified / NRTL pilote, modèle _____
2. POUR EMPLACEMENTS SECS SEULEMENT ou UTILISATION
EXTÉRIEURE SEULEMENT ou SEC / UTILISATION EXTÉRIEURE
SEULEMENT ou extérieure / Utilisation submersible seulement -
comme indiqué sur les appareils
3. LES FILS D'ALIMENTATION 90 °C MIN
4. Modèles L01, L03, L04, L05, L06, L07 et: utilisables dans le béton
coulé, UTILISATION DE CLASSE 2 CIRCUIT UNIQUEMENT

Les instructions d'installation

1. L'installation de mise à la terre doit être fait en conformité avec
CEC Partie 1.
2. AVERTISSEMENT : RISQUE D'INCENDIE OU
D'ÉLECTROCUTION : NE PAS FAIRE OU MODIFIER DES
OUVERTURES DANS LE COMPARTIMENT DE CÂBLAGE OU
DE COMPOSANTS ÉLECTRIQUES LORS DE L'INSTALLATION.
NE PAS MODIFIER OU AJOUTER DES BALLASTS, OU AUTRES
COMPOSANTS ÉLECTRIQUES
3. CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE
D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI
CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT
AINSI QUE LES RISQUES INHÉRENTS. CONSULTER UN
ÉLECTRICIEN QUALIFIÉ.
4. COUPER LE COURANT AVANT L'INSTALLATION.
5. CONSERVEZ CES INSTRUCTIONS.